

BEFORE YOU START

.MP4

Use MP4 video files at the sizes shown →

3" Screens

640x360

4" Screens

800x480

5" Screens

854x480

7" & 10"

1280x720

Video won't play? Make sure your video pixel dimensions are correct. Condense the file to **under 210 MB** for standard hard drives.

1



Plug in the USB cable

Connect the USB to your computer, then plug the **USB-C** end into the port on the bottom edge of the player.

2



A new drive appears

A new drive or device opens automatically. If not, open **File Explorer** to find the attached drive.

This PC

↓ USB Drive (D:)

video

3



Open the "Video" folder

Double-click the player's folder named **"Video"** to open it up.

USB Drive (D:)

video

double-click ↗

4



Delete the placeholders

Select placeholder videos and delete them. None pre-loaded? Skip. **Don't delete the Video folder!**

USB Drive (D:) > video

✓ 01.mp4

✓ 02.mp4

5



Copy your videos

Open another window, select the video file(s) you want, and **copy** them.

This PC > Videos

✓ My Video 1

✓ My Video 2

6



Paste into Video Folder

Paste your video file(s) directly into the player's **Video** folder.

USB Drive (D:) > video

My Video 1

My Video 2

pasted ↓

7



Rename for play order

For multiple videos, rename files **01.mp4, 02.mp4, 03.mp4...** to set play order.

USB Drive (D:) > video

01.mp4 #1

02.mp4 #2

03.mp4 #3

8



Unplug & enjoy!

Once renamed, unplug the cable and your videos start playing automatically. That's it!

